

xH0y2HKQOq8

(SPEECH)

[00:00:00.00] [MUSIC PLAYING]

(DESCRIPTION)

[00:00:00.00] Bissell. ICONpet Cordless Vacuum. Assembly, First Use, and Charging the Battery.

(SPEECH)

[00:00:05.98] In this video, you'll learn everything you need to know about assembling, using, and charging the battery for your ICONpet cordless vacuum. To assemble, connect the extension wand to the motorized floor cleaning foot. They should click into place. Put the hand vacuum assembly on the extension wand. This should also click into place.

[00:00:26.29] Your vacuum needs to be charged for four hours before its first use. To charge your vacuum, plug the charger into the wall. Then plug the charger into the charging port on the back of the hand vac. Once fully charged, all three sections of the battery icon will be lit up. You can also charge your vacuum while it's on the wall mount. See our video on installing wall storage and charging station. This vacuum can be used as a stick vac, hand vac, or an extended reach vacuum with the hand vacuum and wand.

[00:00:57.85] Press the Power button to turn it on.

(DESCRIPTION)

[00:00:59.68] Button on handle.

(SPEECH)

[00:01:00.94] Decide which cleaning mode you want to use. For a full walkthrough of the different cleaning modes, see our video on cleaning modes. Your vacuum also comes with multiple attachments. See our video on using the attachments for more details. If you have the ICONpet Pro, these tools also come with it. Additional tools can be purchased for use with your ICONpet. Now you're ready to clean with your ICONpet cordless vacuum.

(DESCRIPTION)

[00:01:28.10] The vacuum cleaner is used on carpet underneath a table. Text, Bissell. Home to a deeper clean.